



Hold Button Compatibility List

If your phone is not on this list, use the BA-704. The BA-704 works on all phones.

NOTE: The AS-703-M will only work with phones designed to work together.

Phone Maker	Phone Model	Skutch Adapter
AT&T/Lucent	21070	AS-702
AT&T/Lucent	262	AS-702
AT&T/Lucent	272	AS-702
AT&T/Lucent	412	AS-702
AT&T/Lucent	422	AS-702
AT&T/Lucent	4952	AS-702
AT&T/Lucent	612	AS-702
AT&T/Lucent	622	AS-702
AT&T/Lucent	712	AS-702
AT&T/Lucent	722	AS-702
AT&T/Lucent	732	AS-702
AT&T/Lucent	742	AS-702
AT&T/Lucent	752	AS-702
AT&T/Lucent	8102	AS-702
AT&T/Lucent	812	AS-702
AT&T/Lucent	822	AS-702
AT&T/Lucent	830	AS-702
AT&T/Lucent	832	AS-702
AT&T/Lucent	842	AS-702
AT&T/Lucent	843	AS-703-M
AT&T/Lucent	853	AS-703-M
AT&T/Lucent	854	AS-703-M
AT&T/Lucent	874	AS-703-M
AT&T/Lucent	902	AS-702
AT&T/Lucent	912	AS-702
AT&T/Lucent	922	AS-702
AT&T/Lucent	944	AS-703-M
AT&T/Lucent	945	AS-703-M
AT&T/Lucent	952	AS-702
AT&T/Lucent	953	AS-703-M
AT&T/Lucent	954	AS-703-M
AT&T/Lucent	955	AS-703-M
AT&T/Lucent	964	AS-703-M
AT&T/Lucent	974	AS-703-M
AT&T/Lucent	982	AS-702
AT&T/Lucent	983	AS-702
AT&T/Lucent	984	AS-703-M
AT&T/Lucent	992	AS-702-B

Phone Maker	Phone Model	Skutch Adapter
AT&T/Lucent	993	AS-702-B
AT&T/Lucent	1040	CK-1A4
AT&T/Lucent	1070	CK-1A4
AT&T/Lucent	1080	CK-1A4
AT&T/Lucent	90240	AS-703-M
AT&T/Lucent	90529	AS-703-M
AT&T/Lucent	90889	AS-703-M
AT&T/Lucent	E2562	CK-1A2
AT&T/Lucent	E2662	CK-1A2
AT&T/Lucent	EP5962	CK-1A3
AT&T/Lucent	SB67118	CK-1A6
AT&T/Lucent	SIGNATURE	AS-702
AT&T/Lucent	TL76108	CK-1A5
Bell	223	AS-702
Bell	232	AS-702
Bell	259	AS-702
Bell	261	AS-702
Bell	268	AS-702
Bell	367	AS-702
Bell	470	AS-702
Bell	52905	AS-702
Bell	Sonacor 412	AS-703-M
Bell	Sonacor 412CID	AS-703-M
Bell	Sonacor 4900	AS-703-M
Bell	Sonacor BE5200	AS-702 [1]
Bell	Sonacor BE5300	AS-702 [1]
Bell	Techline 420	AS-702 [1]
Casio	SI460	AS-703-SBC
Casio	SA400	AS-703-SBC
Conair	PR3001S	AS-702
Conair	XS1200	AS-702
Cortelco	4125	AS-703-M
Cortelco	412541TP127S	AS-703-M
Cortelco	TP127S	AS-703-M
Cortelco	2740	AS-702-B [2]
Cortelco	2750	AS-703-B [2]
Epic	ET4000	AS-702 -B [1]
Epic	ET4300	AS-702 -B [1]

[1] Requires two AS-702's and a "Y" splitter for the audio

[2] Requires two AS-702-B's and a "Y" splitter for the audio



Hold Button Compatibility List

Phone Maker	Phone Model	Skutch Adapter
Execufone	ITC-420	AS-703-M
Execufone	420I	AS-703-M
GE	187	AS-702
GE	2-9418	AS-702
GE	2-9420-A	AS-702
GE	2-9435-A	AS-702
GE	2-9435-B	AS-702
GE	2-9435-C	AS-702
GE	2-9436-A	AS-702
GE	2-9438-A	AS-702
GE	2-9480	AS-702
GE	2-9481	AS-702
GE	2-9487	CK-2
GE	2-9488	CK-2
GE	2-9490	AS-702-B
GE	2-9638-A	AS-702
GE	2-9975	AS-702
GE	25403	CK-7
GE	25404	CK-7
GTE	2350	AS-702
IBM	412	AS-703-M
IBM	412CID	AS-703-M
IBM	4900	AS-703-M
Intellitouch	ITC-420	AS-703-M
Intellitouch	420I	AS-703-M
Northern Telecom	Unity	AS-702
Pac Bell	261	AS-702
Pac Bell	FE5350	AS-702
Panasonic	KX-T3110	AS-702
Panasonic	KX-T3120	AS-702
Panasonic	KX-T3122	AS-702
Panasonic	KX-T3135	AS-702
Panasonic	KX-T3145	AS-702
Panasonic	KX-T3155	AS-702
Panasonic	KX-T3160	AS-702 [1]
Panasonic	KX-T3165	AS-702
Panasonic	KX-T3170	AS-702 [1]
Panasonic	KX-T3175	AS-702
Panasonic	KX-T3280	AS-702
Panasonic	KX-T3281	AS-702
Panasonic	KX-T3980-H	AS-702

Phone Maker	Phone Model	Skutch Adapter
Panasonic	KX-T3980-R7	AS-702
Panasonic	KX-T3981	AS-702
Panasonic	KX-TC930	AS-702
Panasonic	KX-TG2000	CK-1P7
Panasonic	KX-TG2720	CK-1P2
Panasonic	KX-TG2740	CK-1P2
Panasonic	KX-TG4000	CK-1P7
Panasonic	KX-TG4500	CK-1P7
Panasonic	KX-TG5480	CK-1P3
Panasonic	KX-TG6500	CK-1P3
Panasonic	KX-TG6502	CK-1P3
Panasonic	KX-TG6700	CK-1P4
Panasonic	KX-TG6702	CK-1P4
Panasonic	KX-TG650	CK-1P3
Panasonic	KX-TG9381T	CK-1P6
Panasonic	KX-TG9382T	CK-1P6
Panasonic	KX-TG9391T	CK-1P6
Panasonic	KX-TG9392T	CK-1P6
Panasonic	KX-TG9471	CK-1P8
Panasonic	KX-TGA200	CK-1P7
Panasonic	KX-TGA400	CK-1P7
Panasonic	KX-TGA420	CK-1P7
Panasonic	KX-TGA650	CK-1P3
Panasonic	KX-TGA670	CK-1P4
Panasonic	KX-TS20	AS-702
Panasonic	KX-TS21	AS-702
Panasonic	KX-TS25	AS-702
Panasonic	KX-TS27	AS-702
Panasonic	KX-TS208	AS-702
Panasonic	KX-TS3282	AS-702-B
Panasonic	KX-TS4100	CK-1P5
Panasonic	KX-TS4200	CK-1P5
Panasonic	KX-TS4300	CK-1P5
Panasonic	VA-8400	AS-702
Panasonic	PQLV30024ZB	CK-1P3
Phone Mate	PMG-4125	AS-703-M
Qwest	NSQ412	AS-703-H
Radio Shack	1752	AS-703-M
Radio Shack	206 – old	AS-702
Radio Shack	208 – old	AS-702
Radio Shack	209 – old	AS-702

[1] Requires two AS-702's and a "Y" splitter for the audio

[2] Requires two AS-702-B's and a "Y" splitter for the audio



Hold Button Compatibility List

Phone Maker	Phone Model	Skutch Adapter
Radio Shack	210 / 43-623	AS-702
Radio Shack	212 / 43-463	AS-703-M
Radio Shack	612 / 43-461	AS-703-M
Radio Shack	43-373D	AS-702
Radio Shack	ET-1753/43-1753	AS-702
Radio Shack	43-430	AS-702
Radio Shack	ET-146 / 43-642	AS-702
Radio Shack	ET-180	AS-702
Radio Shack	ET-181 / 43-470	AS-702
Radio Shack	ET-184	AS-702
Radio Shack	ET-192	AS-702
Radio Shack	ET-193	AS-702
Radio Shack	ET-293 / 43-622	AS-702
Radio Shack	ET-469 / 43-469	AS-702
RCA	25201	AS-702-B
RCA	25210	CK-1R2
RCA	25250	CK-1R2
RCA	25255	CK-1R3
RCA	25403	CK-7
RCA	25404	CK-7
RCA	25413	CK-7
RCA	25414	CK-7
RCA	25415	CK-7
RCA	25423	CK-7
RCA	25424	CK-7
RCA	25425	CK-7
SBC	2105	AS-702
SBC	4000	AS-702 [1]
SBC	410	AS-703-SBC
SBC	420	AS-703-M
Skutch	HT-878	AS-702
Smarttalk	208VX	AS-702
Sony	IT-M804	AS-702-B [2]
South Western Bell	FT325	AS-702
South Western Bell	FT360	AS-702
South Western Bell	FT365BL	AS-702
South Western Bell	FT412	AS-702 [1]
Spectra Phone	FP-40M	AS-702
Sprint/Radio Shack	SP-702/43-5702	AS-702
Sprint	SP-705	AS-702
Starplus II	HAC2605	AS-702

Phone Maker	Phone Model	Skutch Adapter
Starplus II	HAC2606	AS-702
TDS	TDS-412	AS-703-H
TMC	ET4000	AS-702 -B [1]
TMC	ET4300	AS-702 -B [1]
TT Systems	412	AS-703-M
TT Systems	412CID	AS-703-M
TT Systems	4300	AS-702 [1]
TT Systems	4900	AS-703-M
TT Systems	5200	AS-702 [1]
TT Systems	5300	AS-702 [1]
TT Systems	7993	AS-702 [1]
Uniden	UB-420	AS-703-M
Uniden	420	AS-703-M
Verizon	NSQ412	AS-703-H

[1] Requires two AS-702's and a "Y" splitter for the audio

[2] Requires two AS-702-B's and a "Y" splitter for the audio