

- Conflicting station id's cause the music not to activate and to keep playing when the phone is taken off hold.

**Note: You cannot program the station number on the AT&T phones, while that phone has anyone on a line or on hold; put them on hold and grab them on another phone in order to program the station number of the first phone.**

### ● **SETUP FOR AT&T 843**

- 1) Press **STORE**.
- 2) Press **\***.
- 3) Press **#**.
- 4) Enter 2 digit station number from **11** to **22**.
- 5) Press **ICM**.
- 6) You get a single ring signal if accepted.

### ● **SETUP FOR AT&T 853, 854, 953, 954 & RADIO SHACK 212 & 612**

- 1) Press **PROGRAM**.
- 2) Press **\***.
- 3) Press **#**.
- 4) Enter 2 digit station number from **11** to **22**.
- 5) Press **INTERCOM**.
- 6) You get a single ring signal if accepted.

### ● **SETUP FOR GE 2-9450-B, C, D, E, F**

- 1) Press **STORE/IN**.
- 2) Press **INTERCOM**.
- 3) Press one of the 16 numbered memory buttons at the top of the phone (these correspond to the station number, **1=station 01, 2=station 02**, etc).
- 4) The phone will make the intercom light blink red while it check for that station id and then the lines.
- 5) If the intercom light keeps blinking red/green, then try a different numbered memory button.
- 6) The intercom light will go out when a good station number is selected.

### ● **SETUP FOR GE 2-9451'S**

- 1) This phone requires version 4.2 or higher for the AS-703-G.
- 2) Press **PROGRAM**.
- 3) Press **0**.
- 4) Press **#**.
- 5) Enter 2 digit station number from **01** to **16**.
- 6) Press **#**.
- 7) The phone will make the intercom light blink red while it check for that station id and then the lines.
- 8) If the intercom light keeps blinking red/green, then try a different 2 digit station number.
- 9) The intercom light will go out when a good station number is selected.

### ● **SETUP FOR IBM/SONECOR 412, 412CID & 4900**

- 1) Press **STORE**.
- 2) Press **1**.
- 3) Press **0**.
- 4) Enter 2 digit station number from **11** to **22**.
- 5) Press **MUTE**.
- 6) You get a single ring signal if accepted.